PREMIER®

MANUAL DE INSTRUCCIONES
ALISADOR DE CABELLO
ADC-5186HC

ESTIMADO CLIENTE
Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
RECOMENDACIONES 2
DESCRIPCIÓN 3
INSTRUCCIONES DE OPERACIÓN 3
LIMPIEZA Y MANTENIMIENTO 4
ALMACENAMIENTO 4
DIAGRAMA DE DESPIECE 5

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠ INSTRUCCIONES DE SEGURIDAD

- Verifique que el voltaje de la unidad corresponda con el del área donde la desea conectar.
- Utilice la unidad únicamente para propósitos domésticos.
- No utilice el alisador cerca de la tina, la ducha o el lavamanos, u otros contenedores con agua.
- No utilice el alisador con las manos mojadas. Si la unidad se moja, desconecte inmediatamente el cable.
- No deje el alisador sin supervisión cuando lo esté utilizando.
- Utilice el alisador únicamente para el propósito para el cual fue diseñado.
- Este producto no debe ser utilizado por personas con capacidades físicas o mentales reducidas, por falta de experiencia y conocimiento, a menos que reciban instrucción y supervisión de parte de una persona experimentada.
- Este producto no es un juguete. Manténgalo fuera del alcance de los niños.
- Retire el empaque del producto y no permita que los niños jueguen con él.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

RECOMENDACIONES

- De vez en cuando observe el cable en búsqueda de daños. No utilice el alisador si el cable de poder muestra alguna falla.
- No introduzca la unidad en agua ni en otros líquidos.
- No coloque el alisador cerca de superficies calientes.
- Si el cable de poder está dañado debe ser reemplazado para evitar un mal funcionamiento y accidentes. Póngase en contacto con un técnico calificado.
- No utilice la unidad en el exterior y consérvela en un entorno seco.
- No utilice accesorios que no sean los recomendados por el fabricante.
- No utilice un conector diferente al que se proporciona con la unidad.
- Desconecte el cable halando del enchufe, pero no del cable.
- No enrolle el cable alrededor del alisador y no lo doble. Asegúrese de que el cable de poder no entre en contacto con partes calientes del alisador.
- Asegúrese de que la unidad se ha enfriado por completo antes de limpiarla y guardarla.
- La temperatura de la superficie del alisador puede ponerse muy caliente cuando lo esté utilizando. No toque estas partes para evitar quemarse.
- Asegúrese de que la unidad nunca entré en contacto con materiales inflamables, tales como cortinas, ropa, etc, y que el cable de poder no entre en contacto con el agua.
- Antes de limpiar desconecte la unidad y permita que se enfríe.
- El alisador no está diseñado para ser utilizado con algún tipo de sistema control remoto.
- Coloque la unidad siempre sobre una superficie plana. Asegúrese también de no cubrir la unidad con nada.
- Desconecte el cable del tomacorriente cuando no esté utilizando la unidad.
- Si utiliza un cable de extensión asegúrese de que todo el cable está bien desenrollado. Utilice únicamente cables con aprobación CE. La corriente de entrada debe ser al menos de 16A, 250V, 3000W.
- El uso inadecuado de este producto puede causar daños y lesiones personales.
- Este producto cumple con los estándares correspondientes.

DESCRIPCIÓN

1. Luz LED indicadora
2. Bloqueo para mantener el alisador en posición cerrada
3. Cable giratorio de 360°
4. Interruptor de encendido y apagado
5. Placa de aluminio

Nota

- Desenrolle el cable de poder completamente.
- Verifique que el voltaje del alisador corresponde con el área donde lo va a conectar.
- Conecte el cable al tomacorriente (conecte igualmente al polo a tierra si es necesario).
- Coloque el alisador sobre una superficie plana y estable.
- No modifique ninguna de sus partes.

INSTRUCCIONES DE OPERACIÓN

Para obtener mejores resultados lave, peine y seque su cabello hasta que esté ligeramente húmedo al tacto. Aunque no lleve a cabo estos pasos, el alisador siempre estará listo para usted.

- Coloque el alisador sobre una superficie plana y estable.
- Coloque el interruptor en la posición de encendido.
- Unos segundos después las placas alcanzan la temperatura de operación.

El alisador tiene 2 funciones y puede ser utilizado de las siguientes maneras:
1. Caliente, como un cepillo calefactor y cepillo giratorio
2. Como un alisador común y corriente

Cepillo

Estando frío el alisador, monte las dos mitades del cepillo uniéndolas como se muestra en la figura.

Después de colocar el cepillo, apriete las 2 partes y bloquee el alisador en posición cerrada. El diseño exclusivo nos permite utilizar el cepillo calefactor al presionar el botón de encendido. El cepillo se puede utilizar cabello húmedo o seco.

Se recomienda una temperatura baja para el cabello húmedo y una temperatura alta para el cabello seco.

Permita que el alisador se enfríe antes de retirar la mitad de cepillo o tome todas las precauciones necesarias utilizando, por ejemplo, un guante de protección, como los coge-ollas.
Desbloquee el cierre de los alisadores y las mitades del cepillo.

Suavidad
Comenzando con la parte superior de la cabeza, tome una sección del cabello de 5 cm de ancho e introdúzcalo en la placa de aluminio.
Mantenga cierta presión y tensión y suavemente descienda el alisador (desde la raíz hasta las puntas).
Repita la operación por todo el cabello y espere a que se enfríe antes de peinarlo.
Precaución: no toque las partes calientes con sus manos y tampoco toque el cuero cabelludo con el alisador.

LIMPIEZA Y MANTENIMIENTO

- Apague y desconecte la unidad antes de limpiarla.
- Limpie la parte exterior del alisador con una esponja o una prenda ligeramente húmeda.
- No sumerja el alisador en agua.
- No utilice limpiadores abrasivos ni cepillos metálicos.

El alisador cuenta con una placa de aluminio para una mejor distribución del calor.

ALMACENAMIENTO

- Asegúrese de que el alisador está completamente frío y seco.
- No enrolle el cable alrededor del alisador para evitar que se troce por dentro.
- Mantenga el alisador en un lugar frío y seco.

ESPECIFICACIONES

Fuente de Potencia: AC110V – 220V 60/50Hz
Consumo de potencia promedio: 25V
Temperatura de operación: 180ºC
Tiempo de calentamiento: <3 Minutos

DIAGRAMA DE CIRCUITOS

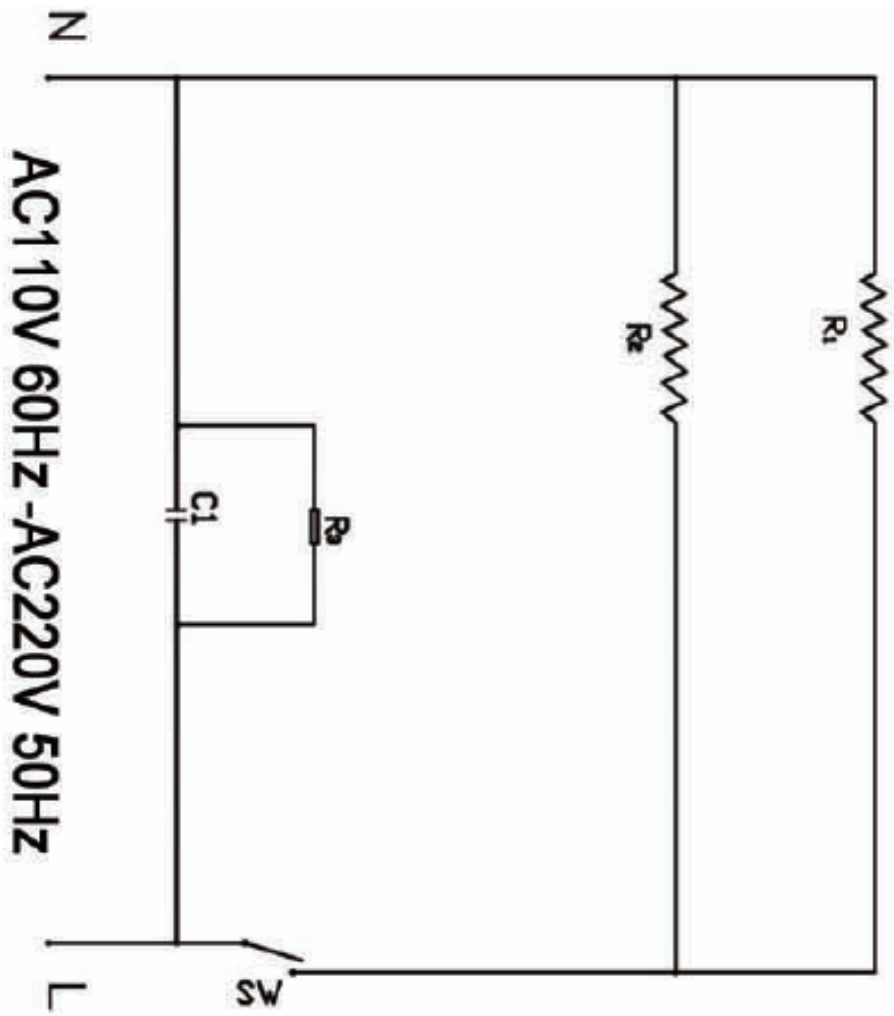

• Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL

HAIR STRAIGHTENER

ADC-5186HC

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

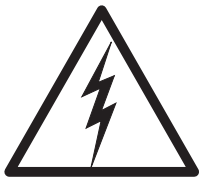

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

IMPORTANT SAFEGUARDS

Please read these instructions carefully before use.
Keep present instructions for future references.
Check that your mains voltage corresponds to that stated on the appliance.
Only use the appliance for domestic purposes and household or similar applications such as:
-staff kitchen areas, in shops, offices and other working environments;
-farm houses;
-by clients in hotels, motels and other residential type environments;
-bed and breakfast type environments Only use the appliance in the way indicated in these instructions.
Never use this unit near bathtub, shower, wash-hand basins or other containers with water. Never use this apparatus near water projections.
Never use this apparatus with the wet hands.
If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
Inform potential users of these instructions.
Never leave the appliance unsupervised when in use.
The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
This device is not a toy , do not leave small children or people with disabilities to play with. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION ！
From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
Never immerse the appliance in water or any other liquid for any reason whatsoever.
Never place it into the dishwasher.
Never use the appliance near hot surfaces.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified pe「son(*) in order to avoid a hazard.
Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
Never use the appliance outside and always place it in a dry environment.
Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
Never use any other connector than the one provided.
Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
Never wind the cord around the appliance and do not bend it Ensure that the power cord does not come into contact with hot parts of this unit.
Make sure the appliance has cooled down before cleaning and storing it.
The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.

- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc... & the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down. This appliance is not intended to be operated by means of an external timer or separate remote- control system.

Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
Always remove the plug from the wall socket when the appliance is not in use.
When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W. Incorrect operation and improper use can damage the appliance and cause injury to the user. This device complies with standards relating to this type of product.

(*) Competent qualified person : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

BEFORE THE FIRST USE

Read these operating instructions respecting safety and tips. Inform potential users of these instructions.
Unpack, keeping all the packaging.

Device Overview

1. Led indicator lihgt
2. Lock to maintain the straightener in closed position
3. 360 ° rotate cable
4. On / Off switch
5. Aluminium plate

Unroll the power cord completely.
Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.

Stand the appliance on a table or flat surface.
Never modify the appliance in anyway.
Certain parts of the appliance can get hot. Do not touch them, as you may burn yourself. Do not use while bathing.
Do not reach for an appliance that has fallen into water.
Do not place or store appliance where it can fall or be pulled into a tub or sink.
Please note that electrical parts are electrically live, even when the switch is off.

HOW TO USE

For best result, wash, comb and dry hair until just damp to touch although the aluminium plate Straightener can be used for touch ups. at any time.
Always place the unit on a smooth, flat, stable and horizontal surface.
Set the On / Off switch to On
After a few seconds the plates reach operating temperature.

• This straightener / Brush has 2 functions and can be used in the following ways:
1. hot as a heating brush & rotate brush.
2. as normal straightener.

Brush

On cold straightener, mount the two half brush by threading on each shaft straightener.

After positioning the brush, Tighten the two parties and block the straightener in closed position. Our exclusive design allows to use in heating brush upon the power button is pressed. The brush can be used on wet or dry hair.

■ To adjust the temperature:
• A soft temperature is recommended for wet hair.
• A high temperature is better to dry hair.

Wait the straightener has cooled before removing the half brush or take all necessary precautions by using, for example, an oven mitt.

• Unlock the closure of straighteners and brushes remove half.

Smooth
Starting with the top of the head, seize a strand of hair of 5 cm broad and introduce it between the aluminium plate
Maintain a certain pressure and tension, and gently descend the apparatus while making slip the strand enter the plates. (from the root towards the ends).
CAUTION : do not touch the hot part or plates of the apparatus with your hands or your scalp. Repeat the operation all around your head and wait until the hair cools before combing them. After use, switch OFF the unit.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool before cleaning.
Clean the outside of the apparatus with a sponge or slightly wet linen.
Never plunge the apparatus in water or all other liquid !
Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

Your hair straightener is equipped with aluminium plate for a better heat distribution on whole each plate.

STORAGE

-Ensure the unit is completely cool and dry.
-Do not wrap the cord around the appliance, as this will cause damage.
-Keep the appliance in a cool, dry place.

The characteristics can change without preliminary preventing

For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION:
If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown,
not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

SPECIFICATIONS

Power Supply: AC110V – 220V 60/50Hz
Average Power Consumption: 25W
Operating Temperature: 180ºC
Temperature Rise Time: <3 Minutes

CIRCUIT DIAGRAM